



Goldstrike

LUGGAGE RACK

WARNING This indication alerts you to the fact that ignoring the contents described herein can result in potential serious injury or death if not followed.

CAUTION This indication alerts you to the fact that ignoring the contents described herein can or will result in material damage and/or personal injury.

ATTENTION This indication alerts you to the fact that if you ignore this detail you will affect the performance or functionality of the product.

All Ciro products are designed for "easy assembly" and/or "plug and play". We recommend a competent mechanic install our products, using standard mechanical procedures to assure a safe and successful installation. Read completely and understand the instructions prior to starting installation.

NOTE: Ciro products are designed and manufactured under very strict quality control. Ciro warrants that products sold to the original purchaser shall be free from any defects in materials and workmanship for a period of 3 (three) years from the date of purchase, and a lifetime warranty against LED failure. Ciro will have no obligation if the customer cannot show proof of purchase. Warranty will not be granted unless the part is properly installed and maintained. Ciro will not be liable for any consequential and incidental damages, including labor, or non-Ciro products. Please visit Ciro3d.com for our complete warranty policy.

Items Included:

1	Luggage rack	4	M6 x 1.0 x 25mm socket head screw
2	Post cover	2	Support bracket
2	Rubber gasket	2	M6 x 1.0 nyloc nut
6	25mm washer	2	M6 x 1.0 x 15mm hex head screw
2	20mm washer	6	Cable tie
4	15mm rubber washer		



WARNING

Maximum weight limit: 5 lbs / 2.3kg

Installation Instructions:


- Note** If you have the non-lighted luggage rack, begin with Step 4.
- Step 1** Park on a level surface, allow vehicle to cool. Utilize center stand if equipped.
- Step 2** Remove side covers and seat. If equipped, unplug the heated seat wire harness when removing seat.
- Step 3** Install Goldstrike part number 48000 (sold separately). Connect the Luggage Rack to the wire adapter to familiarize yourself with how it functions. Disconnect the Luggage Rack and begin installation.
- Step 4** Remove passenger backrest by opening the trunk and removing the six Phillips screws, Fig.1. Set aside, these will be reused. If equipped, unplug the heated backrest wire harness when removing backrest. Take note of the location of the screws as the lengths vary.




Step 5 If equipped, remove the heated backrest wire harness clip from the trunk lid, Fig.2. Remove trunk lid from the hinges by removing the six Allen head screws, Fig.2. Be sure to support the trunk lid while the screws are removed as the trunk lid will fall if not supported. An additional person makes this step easier. Set the trunk lid on a protected surface to not damage the finish.



Step 6 Remove the seven Phillips screws securing the trunk lid liner to the trunk lid and the four Phillips screws attaching the trunk lid latches to the trunk lid liner, shown Fig.3. Set aside, these will be reused. Take note of the position of the trunk lid latches for reinstallation. Separate the trunk lid liner from the trunk lid.

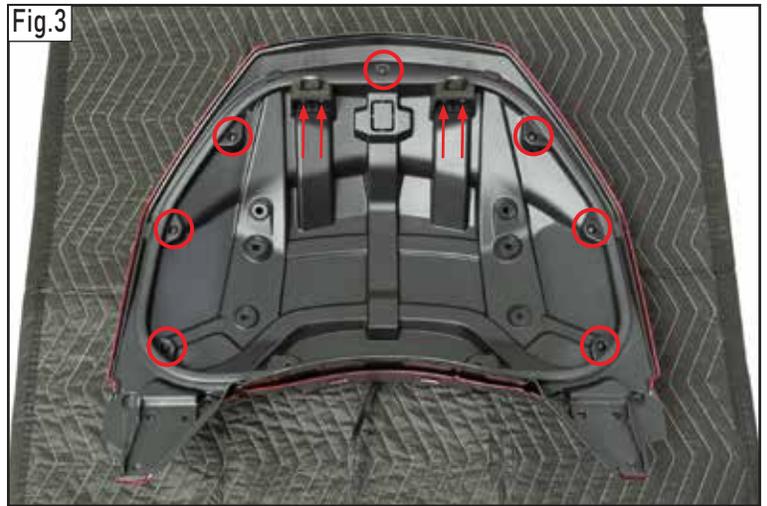

Step 7 Remove the four Phillips screws holding the panels to the trunk lid, Fig.4. The panels and screws will not be reused.

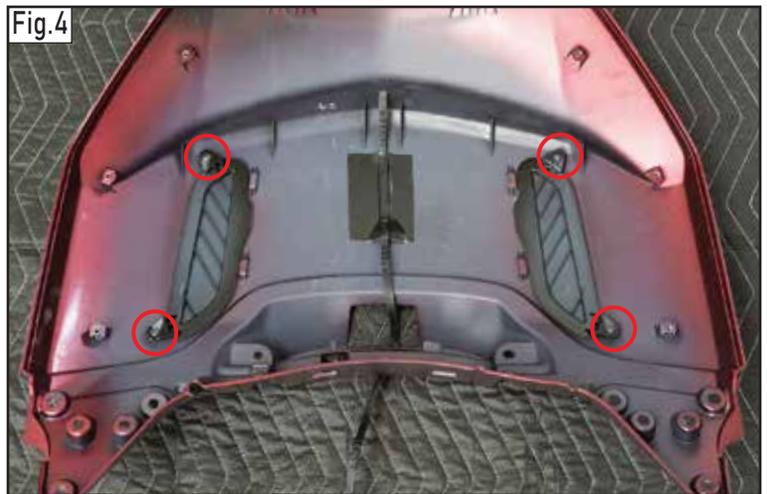

Step 8 Attach the two support brackets and two of the 25mm washers to the top of the trunk lid liner as shown in Fig.5. Place the bolt securing the support bracket going into the trunk lid liner with a 20mm washer and nyloc nut on the inside of the trunk lid liner. Do not over tighten the support brackets as they may need to shift when installing the luggage rack. Secure the two 25mm washers in place with a piece of tape.

Step 9 Reinstall the trunk lid latches and the trunk lid liner to the trunk lid. Make sure the trunk lid latches are installed in the same direction that they were when removed.

Step 10 Reinstall the trunk lid to the hinges. An additional set of hands will make this step easier. Reattach the heated backrest wire harness clip to the trunk lid.

Step 11 Flip the luggage rack upside down to install the post covers and rubber gaskets. The post covers and rubber gaskets are marked with left and right designations. The rubber gasket will hold the post covers in place when installing the luggage rack.

Step 12 Prepare the four luggage rack screws with a 25mm washer and a 15mm rubber washer as shown in Fig.6.



Step 13 Install the luggage rack by carefully guiding the posts into position and holding it in place while loosely installing the four screws. An additional person makes this step easier. After the luggage rack is in place fully tighten the four screws.

Note If you have the non-lighted luggage rack, go to Step 20.

Step 14 Remove the center panel from the front of the trunk, Fig.7. Remove the two screws inside the trunk, Fig.8, pull the panel down and forward. Set aside, these will be reused.

Step 15 Remove the speaker panel screw next to the trunk hinge, Fig.9. Set aside, these will be reused.

Step 16 Slide the luggage rack wire into the gap between the speaker cover panel and the trunk, Fig.10. Gently pull the speaker cover forward to slip the luggage rack wire into the opening just in front of where the screw was removed in Step 14, Fig.11.

Step 17 Route the luggage rack wire following the same path as the heated passenger backrest wire harness, if equipped, or as shown in Fig.12. Make sure to leave enough slack in the wire at the top of the trunk lid for the passenger seat to be installed and not stress the wire, Fig.13. Secure the wire with cable ties.

Step 18 Route the luggage rack wire next to, and under the frame, to the wire harness and plug it into the harness, Fig.14. Make sure the wire is routed so that it will not be pinched or melted.

Step 19 Reinstall the center panel and single screw removed from the speaker cover, Fig.15.

Step 20 Reinstall the passenger backrest, seat and side panels if removed. Plug in heated seat and backrest.



Fig.12



Fig.15



Fig.13



WARNING

Maximum weight limit: 5 lbs / 2.3kg

Fig.14

