



# PASSENGER PHONE MOUNT FOR GOLD WING

- WARNING** This indication alerts you to the fact that ignoring the contents described herein can result in potential serious injury or death if not followed.
- CAUTION** This indication alerts you to the fact that ignoring the contents described herein can or will result in material damage and/or personal injury.
- ATTENTION** This indication alerts you to the fact if you ignore this detail you will affect the performance or functionality of the product.

All Ciro products are designed for "easy assembly" and/or "plug and play". We recommend a competent mechanic install our products, using standard mechanical procedures to assure a safe and successful installation. Read completely and understand the instructions prior to starting installation.

NOTE: Ciro products are designed and manufactured under very strict quality control. Ciro warrants that products sold to the original purchaser shall be free from any defects in materials and workmanship for a period of 3 (three) years from the date of purchase, and a limited lifetime warranty against LED failure. Ciro will have no obligation if the customer cannot show proof of purchase. Warranty will not be granted unless the part is properly installed, unmodified and maintained. Ciro will not be liable for any consequential and incidental damages, including labor, or non-Ciro products. Please visit [Ciro3d.com](http://Ciro3d.com) for our complete warranty policy.

Note: Goldstrike armrest required for installation of Passenger Phone Mount

## Installation Instructions:

1. Park on a level surface, allow the motorcycle to cool.
2. Determine which side of the motorcycle to install the Passenger Phone Mount. Remove plug or accessory from that side passenger armrest.
3. Assemble the Passenger Phone Mount with the included hardware. The base is directional, the groove on the base needs to face the same direction of the arm in its final position, Fig.2. Insert the carriage bolt through the arm, put a plastic washer between the arm and base, followed by the other plastic washer, then the metal washer and locknut. Order shown in Fig.1.
4. Tighten locknut so the arm has some friction when pivoting. Assembly should be tight enough to not move when in use but still allow for passenger adjustments if necessary.

Note: Periodically check tightness of hardware to maintain adequate friction.

5. Install O-ring onto mount base, Fig.1. Insert spring into mount base.
6. Apply a small amount of lubricant to the O-ring before installing assembly into armrest.
7. Position groove of mount base vertically, Fig.3, fully insert assembly into armrest compressing the spring. While maintaining pressure on spring, rotate assembly 90° forward. Releasing pressure will lock detent into position. Verify assembly is seated into detent and cannot be rotated.
8. Install phone holder following its provided instructions.
9. Removal of Passenger Phone Mount is opposite of installation. Spring will be loose, use caution to not lose any components.

## Included Items:

1	Phone mount arm
1	Phone mount base
2	Plastic flat washer
1	Metal washer
1	1/4-20 Carriage bolt
1	1/4-20 Nylon locknut
1	Compression spring
1	Friction O-ring

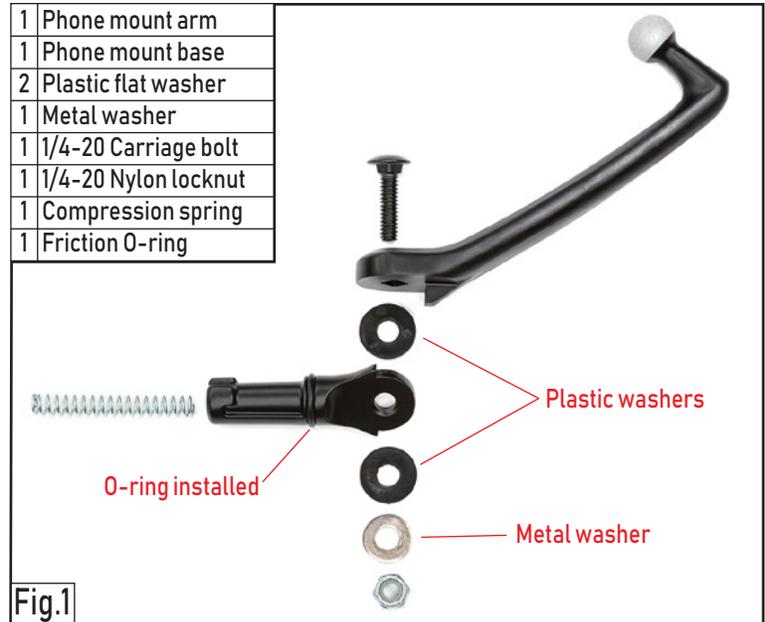


Fig.1

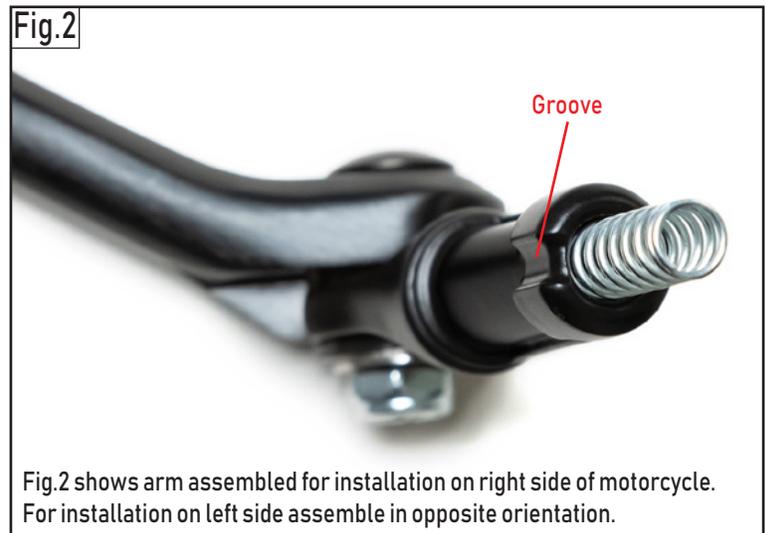


Fig.2

Fig.2 shows arm assembled for installation on right side of motorcycle. For installation on left side assemble in opposite orientation.



Fig.3